



PURIFIER DAITSU NATURE

Edition

11/21

 
Models

 
CADR-160

Performance

Product Name	Air Purifier
Rated Voltage	220V-240V~
Rated Frequency	50Hz/60Hz
Product Usage	Removes pollutants such as particulate matter, gas pollutants and microorganisms in the air.
Method of Cleaning	1. Washable pre-filter 2. Composite carbon cloth filter (HEPA+Activated carbon)
Rated Power	50W
Particulates CADR	159m ³ /h
Particulates CCM	P1
Energy Efficiency Index	Qualified (Particulates)
Noise	57dB(A)
Applicable area	14-24 m ²
Product size	325x172x515mm
Weight	5,7kg

Product Structure

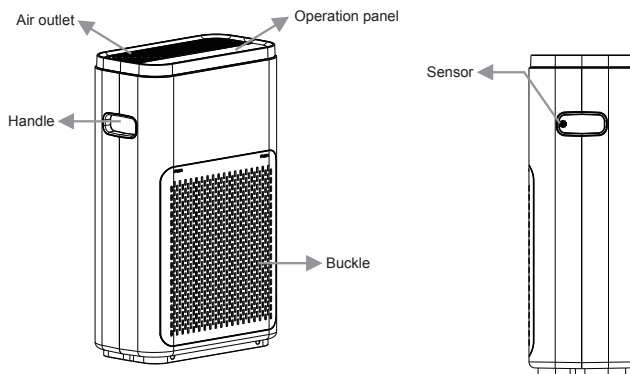

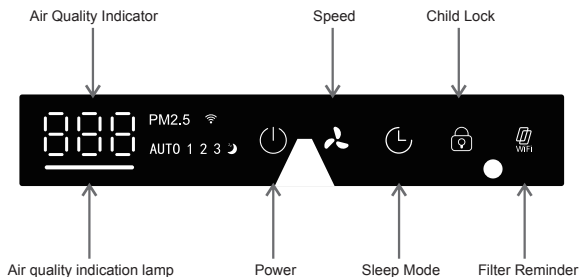

Installation

 
◆ Install filter

First, remove the filter from the plastic bag.

1. Remove the air inlet.
2. Remove the filter.
3. Remove the filter from the plastic bag.

Note: Make sure to remove the plastic bag from the filter before use.


Press the "PUSH" on both sides of the front cover and open the front cover.

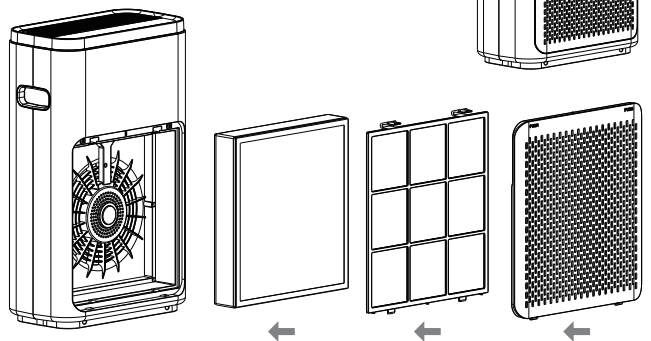

Note: There are internal and external points, the one with the pull tab facing out; be sure to install the front panel before use.


Filter care and maintenance

 
1. Pre-filter (about half a month).



Use a vacuum cleaner to remove dust from the surface of the filter, or wash it with water and dry it thoroughly.

 2. HEPA+ activated carbon composite filter (about once every two months).



When the 1500 hour filter replacement prompt flashes, press  and hold the reset button to clear the filter indicator light and reset the timing function.

- Place the filter in a ventilated place so that the harmful gases and bacteria on the surface of the filter can be volatilized. Do not expose it to excessive sunlight.
- Do not wash the filter with water.

※ Tips

- Unplug the power plug before cleaning and maintenance.
 - Do not operate with the filter removed (no dust removal effect, and the dust that is inhaled may cause equipment failure).
 - Unplug the power cord when it is idle for a long time (it will also consume power in the standby state).
 - Depending on the place of use and the method of use (for example, households with a large number of smokers or areas with severe air pollution), the filter replacement cycle may be shortened. If the filtration effect is not obvious, replace the filter in time.
- When replacing the filter, please turn off the power first.

How to use

1. After plugging in the power, you will hear a sound “Di”, the machine enters standby mode, and the power indicator will shows red color.

2. Boot



After the power is turned on, the air quality indicator light is completely white, the machine enters the automatic mode.

3. Timer



The machine’s working time can be set by the timer button while the machine is running. Set the time to 1 hour, 2 hours, 4 hours, 8 hours, press again to turn off, the selected time is displayed on the screen.

4. Speed

Press the wind speed button to change the speed of the motor. It is divided into AUTO, first gear, second gear, third gear, sleep. When pressed, the machine increases one gear from the current gear position, and then returns to the automatic mode files.



In AUTO mode, PM2.5 corresponds to the corresponding table of air quality and gear position in the intelligent mode of speed:

1~100 = green light = excellent air quality = first gear.

101~200 = yellow light = good air quality = second gear.

201~500 = red light = poor air quality = third gear.

5. Child Lock



When the child lock button is pressed, the button function of the machine enters the locked state, and all the buttons cannot be operated. Long Press this button for 3 seconds to unlock.

6. Reset



WiFi

This unit is equipped with a timing change filter function, which will flash until the 1500 hour filter replacement prompt. Press and hold the reset button for 5 seconds to clear the filter indicator and reset the timing function.

7. Power off



 
 
When the power is on, touch the “Power” button on the operation, and the machine enters the standby state. (The icon light is on when the machine enters the standby state.)

Precautions

◆ Installation instructions


1. Do not place in the following places:

- Direct sunlight or facing the air outlet and heated places (may cause deformation, Deterioration, discoloration, and failure).
- Equipment accessories such as TVs and radios (which may cause image distortion and noise). Please place it at a distance of 1m or more. At the same time, if the same socket is used with these devices, image plugging and noise may occur when the power plug is inserted.

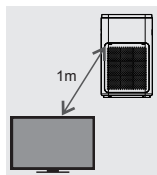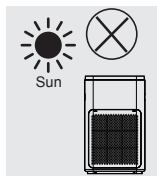

When this happens, plug the power cord into a different outlet.

 2. For indoor dust such as pollen, the product should be placed on the ground. Since pollen, dust, etc. are likely to fall near the floor, it is recommended to place the product on a flat floor in the room.

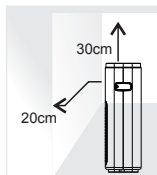


3. In order to effectively circulate the air in the room.

In order not to block the air inlet and outlet, place the product about 30cm or more from the left and right sides of the wall, furniture, curtains, etc. In order to use this product more effectively, please keep the back of the product at least 20cm away from the wall.



4. Do not place objects on the main unit (otherwise it may cause the machine to malfunction). Special Note: Do not place magnets and metal objects.



 
5. Do not block the air inlet and outlet, for example, do not place objects on the air outlet. Or in front of the air inlet.

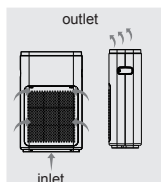

Warning

Prohibited

   1. The machine is prohibited from moving or shaking while it is running. Do not pull on the power cord while moving or storing it. Pulling the power cord may cause a short circuit or damage to the inside of the power cord, resulting in fire or electric shock.
2. Do not damage the power cord or plug, and do not cut, excessively twist, pull, or twist the power cord. If the power cord is damaged, it must be replaced by the manufacturer, service department or professional to avoid danger. Non-professionals are prohibited from disassembling the machine to avoid the risk of electric shock.
3. The plug and hand should not be exposed to water before plugging in the power plug, otherwise there is a danger of electric shock.
4. Do not use power supplies, universal sockets or connected devices that exceed the rated value. 220V ~ 5A AC power. Using a universal outlet that exceeds the rated value or power supply may cause the power cord to overheat and cause a fire.
5. Do not touch the power plug with wet hands, which may result in electric shock.
6. Do not put your fingers or metal objects into the gap of the air outlet, otherwise it may cause electric shock or injury. Do not allow water, flammable detergents or other liquids to enter the product to avoid electric shock or fire.
7. This product is not a substitute for normal ventilation equipment, daily vacuum cleaners and range hoods used in the kitchen.
8. Do not use this product in gas appliances, heating devices or stove accessories.
9. Do not use this product in a wet or hot environment such as a bathroom, toilet or kitchen.
10. Never place products in such locations.
 - Unstable locations (otherwise the product may fall or fall over, resulting in injury, electric leakage, electric shock or fire).
 - Locations that are hot, humid, or wet, such as bathrooms (air purifiers may cause electric shock or fire due to electric leakage) a place where the kitchen emits soot.
11. Do not use air purifiers in indoors with incense-based insecticides.
 - Chemical residues may accumulate in the machine and then be released from the air outlet to endanger your health.
 - After using the insecticide, allow the room to be thoroughly ventilated before using the air purifier.

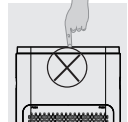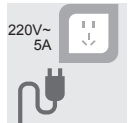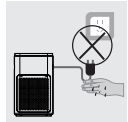

12. It is not recommended to use an air purifier when burning incense or mosquito coils, otherwise the filter of the air purifier will leave an odor.



Mandatory matters

Mandatory matters

1. Turn off the power of the machine immediately when any of the following conditions occur (may cause electric shock, sparks or smoke).

- There is abnormal sound or vibration during operation.
- The product is abnormally hot and has a burnt odor.

2. Please clean the power plug regularly.

- If the power plug is dusty, moisture may damage the insulated part of the plug, resulting in a fire.
- If the appliance is not used for a long time, please unplug the power cord.

3. Be sure to disconnect the power before performing maintenance on the appliance.

- The product may suddenly start, causing electric shock and injury.

4. Plug the plug securely into the power outlet (if the plug is not securely inserted, it may cause electric shock due to overheating or even cause a fire).

 
- Do not use a damaged plug or a loose power outlet.

5. Please pull the power plug from the insulated part of the hand-held plug.

- Pull the power cord to pull off the power plug, which may cause damage to the power cord, electric shock, short circuit, or fire.

6. When any of the following conditions occur, please turn off the power of the machine immediately and look for the maintenance department.

- The switch does not work.
- The power cord or plug is abnormally hot.
- I noticed an abnormal sound or vibration.
- There are any other abnormalities or malfunctions.

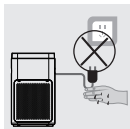

7. Non-professionals are prohibited from disassembling the machine to avoid the risk of electric shock.

For IEC: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

For EN: This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Troubleshooting

◆ Common fault phenomenon, fault code description and troubleshooting

Fault phenomenon	Inspection / solution
Can't turn on or press button no response.	1. Is the power cord plug plugged in? → Plug in the power cord. 2. Is the front cover of the purifier covered? → Cover the front cover of the purifier.
Button no response.	1. Is the filter dirty? → Clean the filter. 2. Is the filter not replaced for a long time? → Replace the filter with a new one.
The smell of the air outlet makes people feel uncomfortable.	1. Is the plastic bag on the filter screen removed by the purifier? → Remove the plastic bag from. The filter before using it for the first time. 2. Is the order of the purifier filter incorrectly installed? → Please refer to the instructions for the installation sequence and precautions.
The purifier runs for a long time but the air quality is not significantly improved.	The filter alarm light is on: it indicates that the filter timing change timer has reached the set value. At this time, after changing the filter screen, press and hold the sleep to reset.

Packing details

Body	1pc
Main filter	1set
Primary filter	1pc
Product Manual	1pc
Move control	1pc


WiFi Instructions

 
1. Scan and download

- 1) Download “Smart Life” APP.
- 2) Log in the APP after registration (suitable for Android or ios system).




2. Add device

- 1) The air purifier and the mobile phone need connecting with same wifi.
- 2) When the machine is standby, keep pressing “Reset” Button on the control panel for 5 seconds until the WIFI or  indicator light flashing quickly.
- 3) Click “Add device” and then choose “air purifier”.

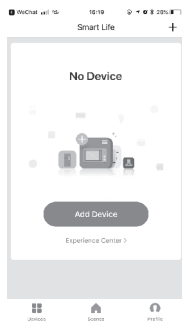


3. Configuration mode

 Confirming the WIFI indicator light on control panel is flashing quickly, then click “Finish Network configuration”.

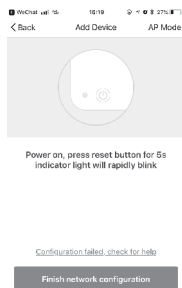


4. Choose wifi

 Choosing the same WIFI mobile phone is connecting, enter WIFI password, and click “confirm”.

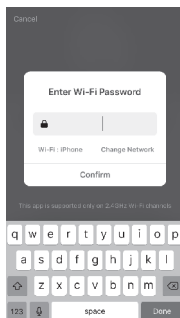


5. Configuration process

 Wait for the configuration to be completed.

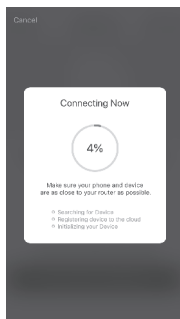

6. Configuration completed

 Choose “Done” and enter control interface.

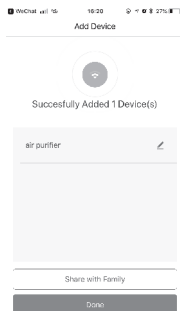

dzitsu

EUROFRED
being efficient

Eurofred S.A.
Marqués de Sentmenat 97
08029 Barcelona
www.eurofred.es