



# Wired Wall Pad Controller Operation Guide

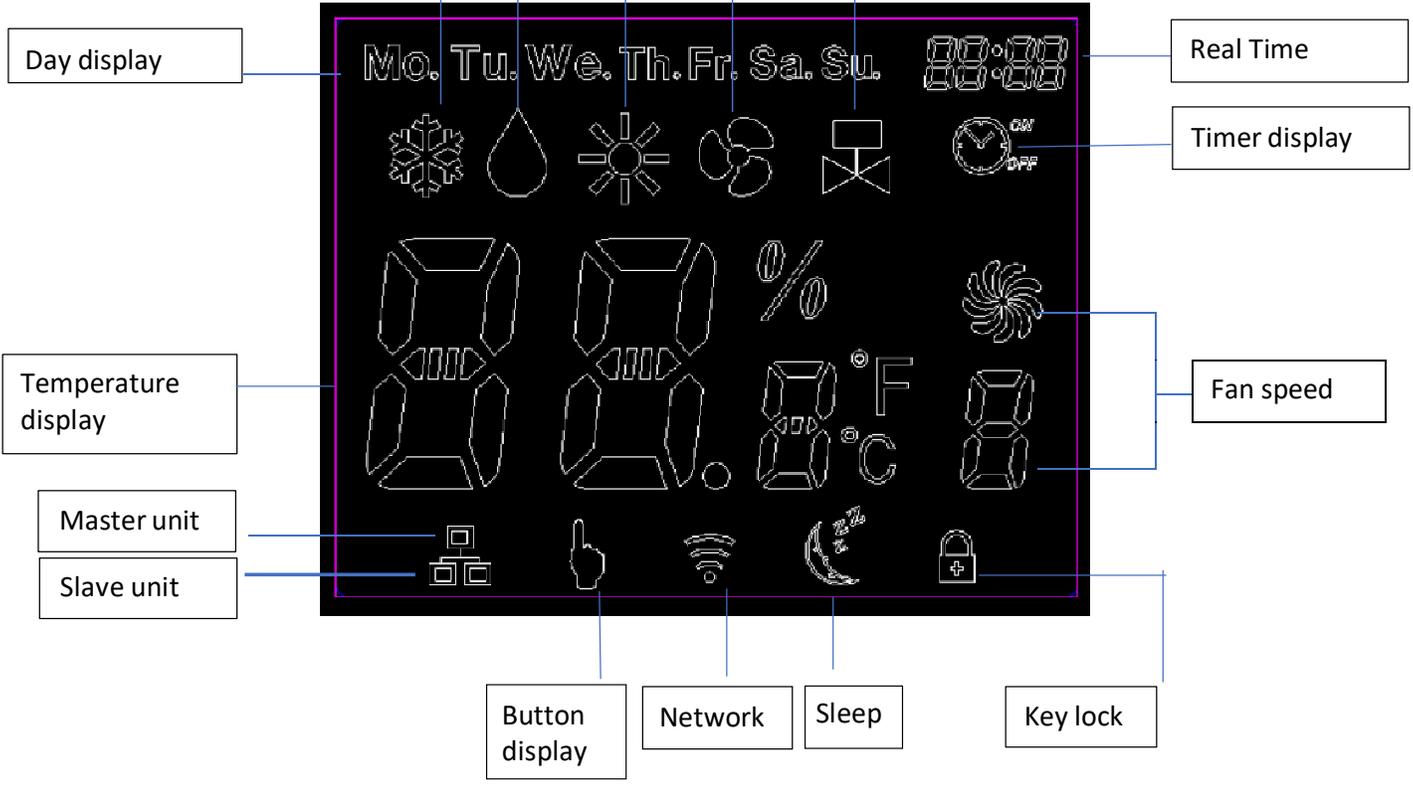

Cool mode	Dry mode	Heat mode	Fan mode	Louver swing ON
-----------	----------	-----------	----------	-----------------



## 1. Dimensions

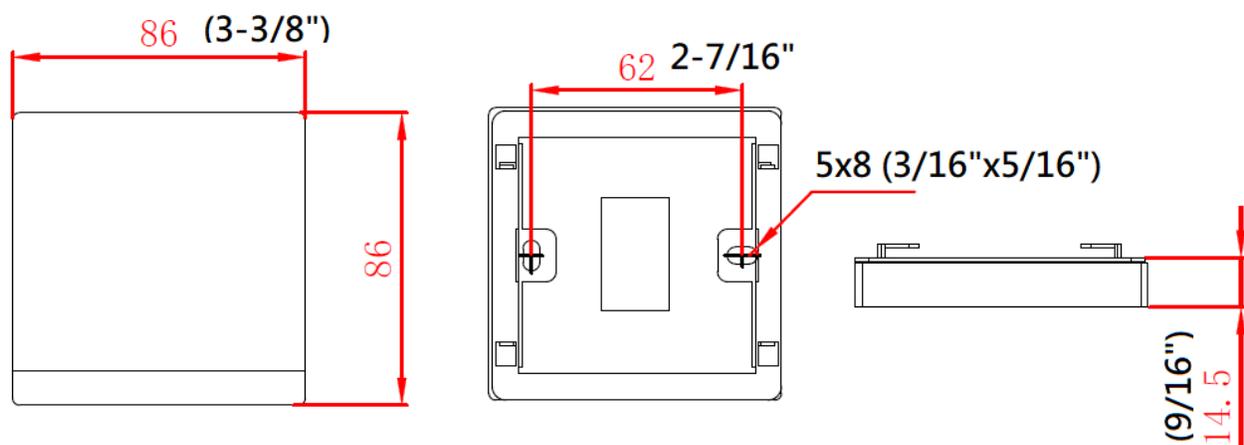

## 2. Buttons function

Button						
Name	ONOFF	MODE	FAN	SET	DOWN	UP
Function	Switch on or off the unit	Switch between modes	Change Fan Speed	Switch interfaces	Modify parameters	Modify parameters

Press to change function setting: (CNT stands for pressing times)

- (1) CNT=0 : No function
- (2) CNT=1 : Real time setting
- (3) CNT=2 : Timer On/Off setting
- (4) CNT=3 : Sleep, swing and sensor settings
- (5) CNT=4 : Network control (Single control) mode setting
- (6) CNT=5 : Global control
- (7) CNT=6 : Parameters checking

## 3. Real time setting

“:” blinks for every second when real time is shown. Press once to enter Real Time setting interface. When “:” is on, then press or to adjust the current time. Press to adjust date. Press to adjust hour or minute.

Press to confirm settings and exit. If no operation within 6 seconds, it will automatically exit and the setting will not be saved.

## 4. Time On/Off setting

If the master unit is in global control mode and the ON/OFF timer setting is selected, the master unit will command the whole network to be ON or OFF. Otherwise, the ON/OFF timer affects the local unit only. The system supports ON/OFF timer settings for each day of the week.

Press twice to enter Timer setting interface and timer icon is on. When “ON” blinks, press to set timer date (from Monday to Sunday). Press to set hour and minute of timer-on or timer-off alternately. “ON” blinks when timer is set to on and “OFF” blinks when timer is set to off. Press or to set timer on/off time.

Press to confirm settings and exit. If no operation within 6 seconds, it will automatically exit and the setting will not be saved. Timer on/off icon is on when timer on/off is set on that day.

## 5. Swing, Sleep and Sensor setting

Press three times to enter Swing or Sleep setting interface and key lock icon blinks.

- a) Press  to turn the sleep function on or off. Sleep icon is on or off when sleep function is turned on or off.
- b) Press  to turn on or off the swing function.  is on when swing function is on.
- c) Press  to set “□” in fan speed display area to activate the wall pad sensor or set “F” in fan speed display area to isolate the wall pad sensor.

Press  to confirm settings and exit. If no operation within 6 seconds, it will automatically exit but will not save settings.

## 6. Temperature setting

Press  or  to set temperature. Set point temperature is shown on temperature display area.

Press  to confirm settings and exit. If no operation within 6 seconds, it will automatically exit and the setting will not be saved.

When DIP SW1=ON, set point temperature is fixed. In cooling mode, set point temperature is 24°C. In heating mode, set point temperature is 21°C.

When DIP SW1=OFF, temperature can be set from 16°C to 30°C.

When DIP SW2=ON, set point temperature is shown on temperature display area.

When DIP SW2=OFF, room temperature is shown on temperature display area.

The DIP SW1 and SW2 switch can be found at the back of the controller as shown:



## 7. Mode setting

Press  to set COOL, HEAT, FAN, DRY or AUTO (Display both COOL and HEAT icons) mode alternatively.

## 8. Key Lock

Press  and  for 5 seconds to set key lock function. Key lock icon is on or off when key lock function is set to on or off.

## 9. Fan speed setting

Press  to set LOW, MEDIUM, HIGH or AUTO speed.

## 10. ON/OFF setting

Press  to turn on or off the unit.

## 11. Temperature unit setting

Press  and  at the same time for 5 seconds to change temperature unit between Celsius and Fahrenheit.

## 12. Network control (Only master unit can control slave units)

Press  four times to set network control and “Network” icon is on. The slave unit number is blinking in real time display area.

Press  or  to select slave unit which is online. The offline slave unit number is not shown.

Press  to select parameters: ON/OFF unit, temperature, mode, fan speed, swing and sleep.

Press  to set the selected parameter.

1) ON/OFF unit: Press  button once,  blinks in master-slave display area, then press  to turn on unit ( blinks) or turn OFF unit ( blinks).

2) Temperature: Press  twice, temperature blinks in temperature display area, then press  or  to set temperature.

3) Mode: Press  three times, Mode icon blinks in mode display area, then press  to select mode.

4) FAN SPEED: Press  four times, fan speed icon blinks in fan speed display area, then press  to set fan speed.

5) Sleep: Press  five times, sleep icon blinks then press  to set sleep mode.

Press  to confirm settings and exit. If no operation within 6 seconds, it will automatically exit and the setting will not be saved.

### 13. Global control setting

Press  five times to set global control and “NETWORK” icon blinks.

1) Press , timer on/off icon blinks and all slave units’ timer on/off function setting are cancelled.

2) Press , all slave units time are set to the same as master units.

Press , master unit sends commands to all online slave units. “NETWORK” icon is off. If timer on/off function is set on mater unit, “NETWORK” icon blinks until Timer on/off disappears.

### 14. Parameter checking

Press  six times to enter parameter checking interface. Local unit parameter is shown in temperature display area. Unit number is shown in real time hour area and parameter number is shown in real time minute area. For example, 2:03 stands

for No.2 unit and No.3 parameter. Press  and  to select the specific parameter. Press  and  to select unit number. Press  to exit parameter checking interface.

Parameters shown below:

Temp. area	Time area
C0	Return air temperature
C1	Indoor coil 1 temperature
C2	Unit address
C3	Indoor coil 2 temperature

### 15. Error codes

When unit error is detected, unit number blinks on real time hour area and Error code blinks on real time minute area. The Error codes display alternately if more than one error is detected.

If there is no slave unit online, only error code is shown in real time minute area.

Error code table:

Error reason	Error code
Electric heater faulty	E1
Indoor coil sensor 2 faulty	E2
Return air sensor faulty	E3
Indoor coil sensor 1 faulty	E4
Indoor coil low temperature protection	E5
Indoor coil over heat protection	E6
Water pump faulty	E7
Local communication error	E8
EC motor failure	E9

### 16. EC motor RPM setting (Not available in AC motor unit)

**DIP SW3 is used to set EC motor RPM.**

When DIP SW3=ON, wired wall pad enters setting interface. D1/D2/D3 is shown in temperature display area and EC motor RPM is shown in real time display area.

Press  and  to select motor speed (D1, D2 or D3). Press  or  to set EC motor RPM. After 3 seconds, the setting is valid.

When DIP SW3=OFF, wired wall pad resumes normal display.

The DIP SW3 switch set can be found at the back of the controller as shown:

