



SAPPHIRE

USE AND MAINTENANCE MANUAL Read carefully and preserve together with the counter





Manual Revision

Revision date

VZST11961 D-G3813 00 04/10/2013

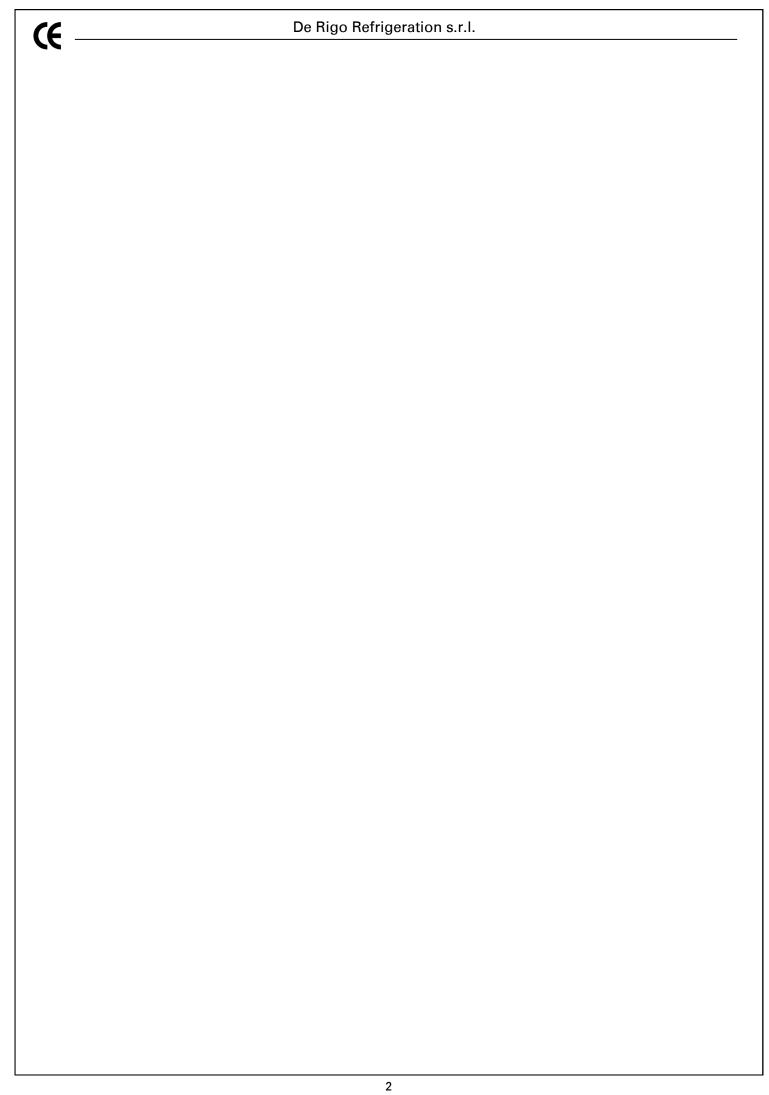




TABLE OF CONTENTS

General Features4	
Position of main components 4	Description of the product
Serial number plate5	
Important installation conditions 6	
Warnings 8	Installation of the product
Installation recommendations 8	
General recommendations 9	I
Precautions for use and minor maintenance 10	
Loading products for display10	
Replacing light bulb11	Maintenance and use of the product
Positioning display shelves	1
Electric components	Lighting and electric controllers which
Lighting14	
Electric panels14	can be configured on the product
Technical information	
Technical documentation inserted in counters 16	Technical data of the product
Technical data	
Emergency situations18	Management of emergency situations
5 ,	· · · · · · · · · · · · · · · · · · ·

We recommend reading the contents of this manual and keeping it together with the counter. The manufacturer will not be held liable for property damage and/or personal harm due to failure to comply with the instructions contained in this manual. It is therefore recommended that whoever uses this counter carefully read the use and maintenance manual.


The refrigerated counters which the following use and maintenance instructions refer to comply with Standard ISO 23953-2 - Refrigerated display cabinets - and apply the HACCP Foodstuff and relative control system safety standards.

The products are manufactured in accordance with the following standards and their specific updates: EN 60335-2-24 (1994) + A51('95) + A52('96) + A53('97), EN 60335-1 (1988) + A2('88) + A5('89) + A6('89) + A51('91) + A52('92) + A53('92) + A54('92) + A55('93) + A56('95), IEC 60335-2-24 (1997) + A1('98), IEC 60335-1 (1991) + A1('94)

This appliance with R290 flammable refrigerant gas (Propane) will be identified with the following label shown on the data plate and on several sensitive components.



The gas is present in the appliance according to a minimum amount prescribed by regulations on flammable gases, but necessarily involves greater precautions in handling the appliance especially when working on the refrigerating system.

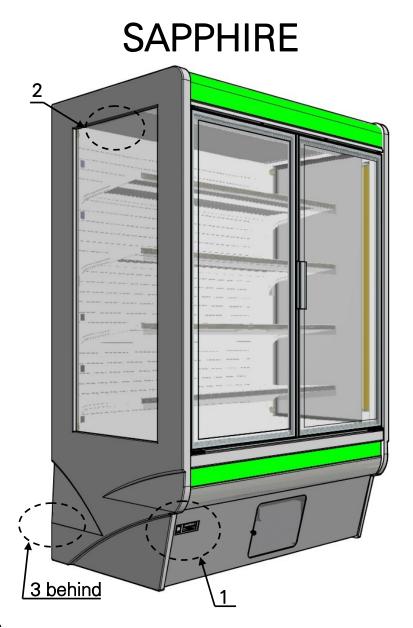

GENERAL FEATURES

The Sapphire is a refrigerated plug-in counter for the display and sale of meat, cold cuts, dairy products, fruit and vegetables with ISO 23953-2 class 3 climate operating conditions.

The maximum depth of the counter when using 450 mm shelves is equal to 850 mm and is available in 1250, 1875 and 2500 mm lengths. It provides the use of swinging doors that ensure good energy savings.

The counter has a built-in hermetic condensing unit and is equipped with a compressor that comes into operation as soon as the plug is connected to the power outlet.

Position of main components

- 1. Electric panel
- 2. Serial number plate
- 3. Equipotential point
- 4. Access to the condenser for cleaning



Serial number plate



- 1. Voltage
- 2. Rated power
- 3. Maximum defrost power
- **4.** Maximum light bulb power (if present)
- 5. Climate class (see table)

- 6. Refrigerant fluid/Refrig. fluid mass (Plug-in)
- 7. Compressor model (if present)
- 8. Standard absorbed current
- 9. Anti-condensation resistances power (if present)
- 10. Temperature Class (ISO 23953-2)

Environmental climate classes (ISO 23953-2)

Climate class	Dry bulb temp.	Relative humidity	Dew point		
1	16°C	80%	12°C		
2	22°C	65%	15°C		
3*	25°C	60%	17°C		
4	30°C	55%	20°C		
5	40°C	40%	24°C		
6	27°C	70%	21°C		

^{*} With reference to environmental climate classes, it must be specified that when climate class 3 is indicated, it means that climate class 3 or lower can be valid.



IMPORTANT INSULATION CONDITIONS

Climate

The climate conditions of the environment where the counter is installed must be within the temperature range established by the counter class. To be within these parameters, it could be necessary to install an air-conditioning system. The system should include an air humidity controller as excessive humidity harms proper operation of the counter.

Dehumidifying the air with an air conditioner instead of with evaporators could be more economical as the counters operate at lower temperatures and therefore absorb more electric energy at the same cooling capacity efficiency.

Grouping several counters together in the same area could be advantageous operating-wise but could be inconvenient for customers.

Air draughts

The counters must be positioned in such a way to limit or avoid air draughts which keep them from operating properly. The counters must not be installed near doors or in areas exposed to strong air currents coming from ventilation or air conditioning vents, for example.

The design of the ventilation systems must take into account that there must be low air speed near the counters, which in any case must never exceed 0.2 m/s.

Special attention must be paid to heating vents.

Thermal radiation and lighting

To limit the negative effects of radiant heat, make sure that the counters are not exposed to sunlight, diffusers or air ducts, to uninsulated roofs or walls heated by sun or other heat sources. The penetration of radiant heat inside the counter increases operating costs and downgrades performance. Do not point spotlights or other concentrated lighting devices towards the inside of the counters. External fluorescent lighting is preferable to incandescent lighting and should be used.

Should incandescent lights be used, make sure that the lighting devices are appropriately ventilated by large ventilation slots.

Surfaces at room temperature radiate enough heat to harm proper operation of the counter. This effect can be limited by installing heat-reflecting ceilings or placing the counters one in front of the other.

Condensation

It is normal for absolute humidity to condensate on a cold surface if the air dew point is higher than the temperature of the surface. Regardless of how a counter is insulated, condensation will be formed if there is no ventilation around it. We therefore recommend leaving at least 60mm between the counter and wall or any other object which can obstruct proper air circulation around the counter.

Transport and handling

The counter is shipped packed in a plastic sheet and fastened on two wooden boards which act as a delivery support to facilitate handling. Keep the counter fully packed until it reaches the installation site to prevent it from being damaged during transport. When the counter has been unpacked, do not dispose of the packaging in common waste disposal centres, but contact specific waste collection facilities for the recovery of materials and substances harmful for the environment.

The counter must be moved using a forklift truck, paying attention to the electrical devices and drains underneath the counter.

Cleaning

The frequency at which display cabinets for vegetables, meat and other unpacked products must be cleaned varies depending on the displayed product. Counters for preserving products such as meat, dairy products and cold cuts must have the display surface cleaned at least once a week to prevent the development and accumulation of bacteria.

The bottom of the tank must be washed frequently in cabinets subject to leakage of liquids or other food products.



The frequency of cleaning however depends on how the counter is used and on hygienic requirements or other particular reasons. Blockage of the water drain can cause a failure which could possibly damage other parts of the counter. Therefore qualified technical personnel should clean the drains periodically.

We recommend:


- ⇒Wait for the counter temperature to come close to room temperature, empty the counter and clean it without using abrasive products or solvents;
- ⇒ Daily cleaning with water and non-aggressive detergents of the outside zones surrounding the display area and the top parts of the shelves in contact with the product, paying special attention if meat counters. Do not touch electric parts with a wet cloth;
- ⇒Weekly, full cleaning of bottom shelves with water and non-aggressive detergents, lifting them with the supplied hook and wearing the protective gloves foreseen by standards in force;
- ⇒Full cleaning every three months of all parts of the counter, wearing the protective gloves foreseen by standards in force;
- ⇒Do not clean the appliance with water jets.

Cleaning the condenser

If present, the counter condensers gather dust and filth and must be cleaned regularly. In standard use conditions, this operation must be done at least once a month using a hard bristle brush and a vacuum cleaner. We recommend wearing gloves as the reduced thickness of the fins can cause cuts and abrasions. A dirty condenser reduces the counter's performance and increases energy consumption.

In detail::

- ⇒ Periodically remove dust from in front of the frontal grate;
- ⇒ Switch-off the machine and disconnect the power supply cable before performing this operation;
- ⇒ Access the condenser by loosening the clamping screw of the frontal grate;
- ⇒ Slide the frontal protective grate to the right;
- ⇒ Clean the condenser with a jet of air or dry brush and eliminate, with vertical movements, the dust and fluff deposited on the fins;
- ⇒ Slide the frontal grate to the left, fixing it with the previously removed screw and power the machine again.

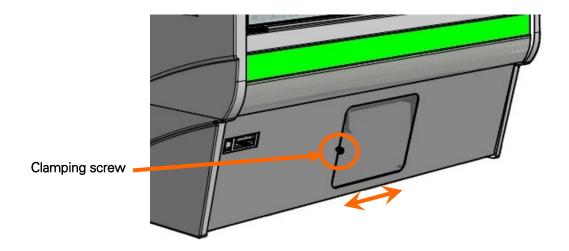

ATTENTION \triangle


During all maintenance and cleaning operations of the counter, use the specific personal protective equipment, provided by the safety standards in force.



WARNINGS

Installation recommendations

- Qualified technical personnel must perform installation and maintenance of this appliance;
- Correct positioning of the counter.

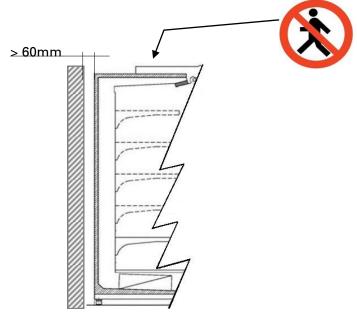

- Check that the mains voltage corresponds to that provided on the identification plate.
- This equipment may not be used in the open air and can not be exposed to rain.
- Connect the appliance to an efficient earthing system.
- Installation and the electrical connection must be performed in compliance with national and local standards in force.
- For the replacement of the cable and plug use only original factory spare parts.
- Connect the power cable to a plug that is easily accessible even after the counter is positioned.
- Isolate the power circuit upstream by means of an omnipolar circuit breaker switch with a minimum contact opening of 3 mm.

<u>ATTENTION:</u> The arrangement and amount of products must not exceed the load limit. We also recommend making sure that the full load is not excessive for the structure of the counter. The following are the approximate capacity values of the shelves. Respect these indications as much as possible.

Max capacity of bottom surface	Max capacity of hanging shelf			
100 Kg x Surface 625	90 Kg x Shelf 450			

N.B.: it is important that the full load of 350 Kg is not exceeded for a 1250 mm module.

De Rigo Refrigeration s.r.l.



General recommendations

To be read before using the counter. \triangle

- This manual forms an integral part of the product and must be stored with the equipment to facilitate rapid consultation.
- The adjuster must not be used with other functions other than those described below, specifically it can not be used as a safety device.
- Before proceeding check the application limits.

Safety precautions. 🐴

- Before connecting the counter ensure that the supply voltage is as required.
- Do not expose the unit to water or humidity: use the counter only within the limits of operation provided for.
- Attention: before carrying out any kind of maintenance remove electric connections from the counter.
- The electric panel must never be opened.
- If malfunction or failure occurs, contact qualified staff for analysis and repair.



PRECAUTIONS FOR USE AND MINOR MAINTENANCE

Before starting any cleaning, maintenance or parts replacement, even if not electrical, make sure that electric power is disconnected and/or open the omnipolar power isolator.

Any technical assistance and extraordinary maintenance must only be carried out by qualified technical personnel.



<u>ATTENTION:</u> when the appliance is no longer working or usable, do not dispose of it in common waste disposal centres, but contact specific waste collection facilities for the recovery of materials and substances harmful for the environment.

Loading products for display


Height of Load


Food products preserved within the load limit are appropriately refrigerated. Those preserved beyond the load limit cannot be appropriately refrigerated and impair the circulation of air, thus jeopardising operation of the counter and deterioration of all the food products. Also remember that products must not cover the air inlet for the counter to operate properly.


A refrigerated display counter is not intended to chill perishable food products but rather to keep them at the temperature at which they were introduced. Food products warmer than that specified for the counter should not be placed in a refrigerated counter.

Do not leave refrigerated food products on pallets or similar structures inside the shop longer than that strictly necessary for transport and loading.

Do not overload the counter: this is the most common error which can cause secondary defects, such as the anomalous formation of frost thus blocking the evaporator and even causing the complete stoppage of the counter. The even distribution of the goods without leaving empty spots guarantees the best operation of the counter. It is good practice to rotate the stock when loading the counters with new products. The older products must be the ones closest to the customers so they are sold first.

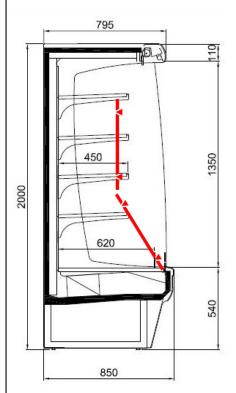

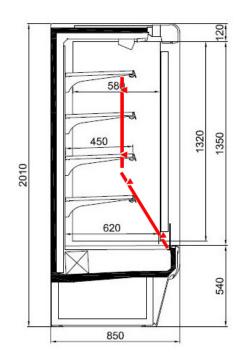

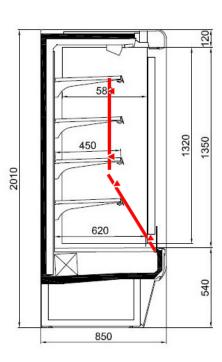

N.B.: Counter operation is guaranteed in the climate conditions indicated on the serial number plate and according to standards ISO 23953-2 if loaded evenly and not beyond the conforming loading line on each counter.



Replacing light bulbs

Replacing roof LED light bulb

Before starting any operation entailing light bulb replacement, make sure power is disconnected and/or open the power isolator. Also remember that any technical assistance and extraordinary maintenance must only be carried out by qualified technical personnel.

IMPORTANT: replace the light bulb with a part of the same type and power. To replace the light bulb:

- 1. Disconnect power to the counter (disconnect the power supply cable);
- 2. Remove the screws fixing the covering sheet metal on the counter's roof Fig. 2a;
- 3. Disconnect the power plug of the light bulb to be replaced Fig. 2b;
- 4. Release the light bulb from the fastening springs by slightly pressing downwards on the counter and extracting the power supply cable from the hole **Fig. 2c**;
- 5. Insert the power supply cable of the new light bulb in the hole, making sure not to remove the protection. Restore the light bulb in its own seat **Fig. 2d**;
- 6. Connect the power supply cable of the just-installed new light bulb;
- 7. Fasten the covering sheet metal on the counter's roof;
- 8. Power the counter again (reconnect the power supply cable).



Fig. 2a



Fig. 2c



Fig. 2b



Fig. 2d



Replacing light bulbs

Replacing roof LED light bulb

Before starting any operation entailing light bulb replacement, make sure power is disconnected and/or open the power isolator. Also remember that any technical assistance and extraordinary maintenance must only be carried out by qualified technical personnel.

IMPORTANT: replace the light bulb with a part of the same type and power. To replace the light bulb:

- 1. Disconnect power to the counter (disconnect the power supply cable);
- 2. Remove the screws fixing the covering sheet metal on the counter's roof Fig. 2a;
- 3. Disconnect the power plug of the light bulb to be replaced Fig. 2b;
- 4. Release the light bulb from the fastening springs by slightly pressing downwards on the counter and extracting the power supply cable from the hole **Fig. 2c**;
- 5. Insert the power supply cable of the new light bulb in the hole, making sure not to remove the protection. Restore the light bulb in its own seat **Fig. 2d**;
- 6. Connect the power supply cable of the just-installed new light bulb;
- 7. Fasten the covering sheet metal on the counter's roof;
- 8. Power the counter again (reconnect the power supply cable).



Fig. 3a



Fig. 3c



Fig. 3b



Fig. 3d



Positioning display shelves

Apply the price tag profile on the shelves proceeding as follows:

- 1. Insert the price tag spacers in the specific housings Fig. 5a;
- 2. Turn the price tag spacers 90 until they lock;
- 3. Insert the aluminium profile along the entire length of the shelf Fig. 5b;
- 4. Insert the price tag profile along the entire length of the previously positioned aluminium profile Fig. 5c.







Fig. 5a

Fig. 5b

Fig. 5c

Apply the shelf supports and shelves only after having installed the price tag profile, keeping in mind that the shelves can also be positioned horizontally (Fig. 6a) or with a –10 inclination (Fig. 6b).



Fig. 6a



Fig. 6b







ELECTRIC COMPONENTS

Lighting

For that which regards counter lighting, remember to switch the lights off as soon as possible to save energy.

Furthermore the counters are equipped with electronic reactors which, if operating conditions are not appropriate, can trip switching off the lights connected to them. To restore correct functioning, just switch the counter off and back on.

Electric panels

The following are the different types of electric controllers belonging to the panels with which the counter can be configured. Also remember that the product will only have one of the available configurations.

<u>ATTENTION</u>: For further information on the chosen instrument, consult the specific manual of the device supplied together with the counter (see pag. 16). Also pay close attention to consult the technical sheet of the controller actually installed on your counter.



Electric panels

DIXELL XR40CX / XR50CX

ON Defrost active, flashing dripping presence.

ON compressor and valve adjustment active,

flashing compressor anti-short cycle.

ON fan is active, flashing door open or delay after defrost.

Scrolls menu options, increases values. Pressed for 3s activates the sections menu

Pressing it briefly allows you to enter the quick access menu.

Switches the light on or off

Keeping the key pressed for 3s activates manual defrost.

Scrolls menu options, decreases values. Pressed for 3s activates the sections menu. Pressing it briefly allows you to enter the quick access menu.

Pressing the key for 3s toggles the instrument from ON to OFF and vice versa

To see and modify the SET point; in programming, allows to select the parameters and confirm an operation. Pressed for 3s, when the MIN and MAX temperatures are viewed, allows to reset the record.

Locking the keypad

Press ▲ and ▼ simultaneously for 2 seconds to lock the keypad; the flashing text "POF" appears; repeating the procedure unlocks the keypad and displays the flashing text "POn".

ON Alarm

View the setpoint value

If you press "set" and release it, the value will be view-only, without any possibility of editing it. Pressing it again and waiting 5 seconds, it returns to the probe temperature reading.

Edit the setpoint value

Press the "set" key for approximately 3s until the unit of measurement icons flash. Then release the key and set the new value by pressing A and V. When finished, press the "set" key once to memorise the value.

Manual activation of defrost cycle

The defrost cycle can be activated manually by keeping the "defrost" key pressed for more than 3 seconds. If defrosting starts, the LED * switches on fixed. If nothing happens after this time, it means the temperature detected by the defrost end probe is higher than the value set in parameter dTE (see adjustment parameters table).

Local alarms

Mes.	Cause	Status of outputs		
PI	Probe 1 error	Output according to CON e COF		
65	Probe 2 error	End of timed defrost		
HA	High temperature alarm	Not modifiable		
LA	Low temperature alarm	Not modifiable		
ER	External Alarm	Not modifiable		

Exiting alarm

Once detected, the alarm signal remains displayed until the alarm condition finishes.

How to reset alarms

Probe alarms P1 and P2 trigger approximately 10 seconds after the probe failure; they are reset automatically 10 seconds after the probe resumes proper operation. We recommend checking the connections before replacing

Temperature alarms HA and LA are reset automatically as soon as the thermostat temperature returns to normal, when defrost starts or the door opens.

The **external alarm** EA is reset as soon as the digital input is deactivated.



TECHNICAL INFORMATION: main adjustment parameters.

	Adjustment	SAPPHIRE			
Par.	DESCRIPTION	range	Cl. H (+1/+10 C)	CI. M2 (+5/+8 C)	Cl. M1 (-1/+5 C)
SET	Temperature control setting	LS US	2.0	0.0	-2.0
HY	Differential	0,1 25,5	4.0	4.0	4.0
dtE	End defrost temp.	-50,0 50,0 C	8.0	8.0	8.0
idF	Defrost cycles interval	1 120 hours	12.0	12.0	12.0
MdF	Maximum defrost duration	0 255 min	50.0	50.0	50.0

TECHNICAL DOCUMENTATION INSERTED IN COUNTER

Each counter has a **yellow envelope placed inside near the serial number plate**. This envelope contains all the required technical documentation, such as:

- Use and maintenance manual;
- Declaration of conformity;
- Quality control sheet;
- Test inspection certificate;
- Counter wiring diagram;
- Reactor board diagram (only if foreseen);
- Manual of controller installed on electric panel (only if foreseen);
- Controller parameters map (only if present);
- Various documentation such as: motorised night blind instructions, electronic valve instructions,... (only if present).



ATTENZIONE ATTENTION

Contiene documentazione tecnica.
Contains technical sheets.
Contient documentation technique.
Enthaelt technischen Daten.
Contiene documentacion tecnica.

N.B.: At times, labels with additional instructions and/or recommendations are applied on some counter surfaces.



TECHNICAL DATA

SAPPHIRE M1

Climate class T		1250	1875	2500
Voltage	V	220 230		
Frequency	Hz	50		
Operating temperature	С	0/+2		
Max absorbed nominal power	W	500 704 1046		
Max absorbed nominal current	А	3.65 5.39 7.50		
Max absorbed defrost power	W	34 76 114		114
Climate class	ISO 23953-2	M1		

SAPPHIRE M2

Climate class T		1250	1875	2500
Voltage	V	220 230		
Frequency	Hz	50		
Operating temperature	С	+3/+5		
Max absorbed nominal power	W	500 704 1046		
Max absorbed nominal current	А	3.65 5.39 7.50		7.50
Max absorbed defrost power	W	34 76 114		114
Climate class	ISO 23953-2	M2		

SAPPHIRE H

Climate class T		1250	1875	2500
Voltage	V	220 230		
Frequency	Hz	50		
Operating temperature	С	+6/+8		
Max absorbed nominal power	W	500 704 1046		
Max absorbed nominal current	А	3.65 5.39 7.50		7.50
Max absorbed defrost power	W	34 76 114		
Climate class	ISO 23953-2	Н		



EMERGENCY SITUATIONS

1. The counter does not start or switches off. \triangle

- Check whether there is an electrical blackout in progress;
- Check that the main wall switch is on.

If the electrical interruption does not depend on the above-mentioned reasons, immediately contact the closest service centre and fully empty the counter, placing the removed products in cold rooms or in other equipment capable of preserving them.

2. The counter temperature is too low. \triangle

- Check that the counter is not loaded beyond the recommended level and that the air vents are not obstructed;
- Start a forced defrost and clean the counter (following safety measures) to then resume standard operation;
- Make sure that the counter is not near heat sources and/or air draughts which could hinder proper operation;
- Should malfunctioning persist, immediately contact the closest service centre.

3. The counter makes too much noise. \triangle

- Check that the screws and nuts are fastened all the way.
- Using a level, check that the counter is level.

Should the noise persist, immediately contact the closest service centre.

4. Gas Leak or Fire. 🛆 🛦

The refrigerant circuit must not be damaged to prevent leaks into the environment. If the gas comes into contact with the air, there is a risk of fire in the presence of a suitable trigger such as an open flame or sparks caused by electrical equipment.

For this reason components have been adapted to prevent these risks and when they need to be replaced, original components which have been approved for the specific use must be requested.

If servicing due to a breakdown or malfunction, qualified personnel must always be contacted to assess and perform the type of procedure required in compliance with statutory safety regulations for this type of gas.


The equipment needed for the procedures must comply with the same requirements as the components of the system, thus avoiding electrical equipment and flames in the presence of flammable gases.

For specific procedures related to emptying and loading the system, proceed with equipment suitable for

the type of gas (vacuum pump, leak detector, etc.) and in any case avoid the presence of flammables in the premises and in particular contact with flames or sparks.

5. Other particular situations. Δ

- Metal parts must be handled with care to avoid possible and not unlikely abrasions and/or cuts as well as possible crushing.
- Removing the bottom surfaces exposes the evaporator and motor fans with the ensuing danger that this could cause.

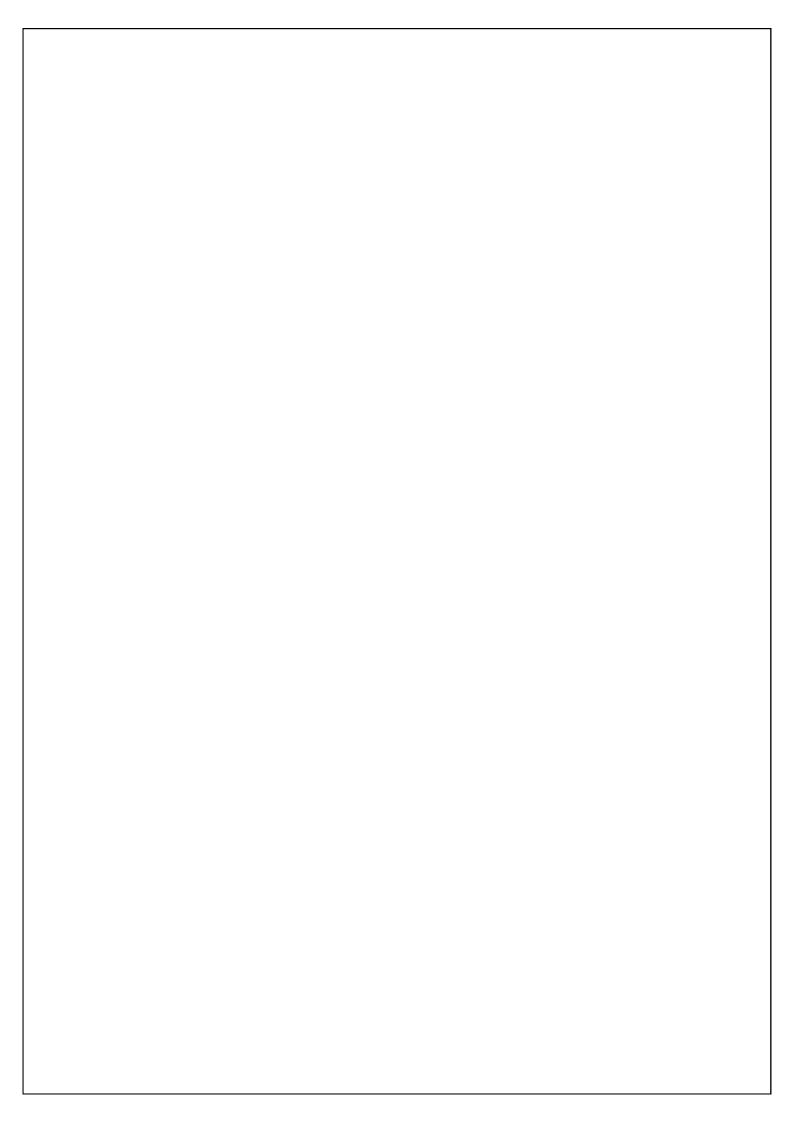

DE RIGO REFRIGERATION srl

Registered and Administrative Office

Via G. Buzzatti, 10 32036 Sedico – BL – Italy Tel. +39 0437 5591 Fax +39 0437 559300 info@derigorefrigeration.com

Ronchi dei Legionari Plant

Via Redipuglia, 163 34077 Ronchi dei Legionari – GO – Italy Tel. +39 0481 477411 Fax +39 0481 776330