



Dry Contact & 24 Volt Adaptor ACCD_GT5

Edition

07/21

Model

ACCD_GT5

To Users

Thank you for selecting Daitsu product. Please read this instruction manual carefully before installing and using the product, so as to master and correctly use the product. In order to guide you to correctly install and use our product and achieve expected operating effect, we hereby instruct as below:

- (1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsibility for their safety. Children should be supervised to ensure that they do not play with the appliance.
- (2) This instruction manual is a universal manual, some functions are only applicable to particular product. All the illustrations and information in the instruction manual are only for reference, and control interface should be subject to actual operation.
- (3) In order to make the product better, we will continuously conduct improvement and innovation. We have the right to make necessary revision to the product from time to time due to the reason of sales or

production, and reserve the right to revise the contents without further notice.

- (4) For personal injury or property loss and damage caused by improper operation such as improper installation and debugging, unnecessary maintenance, violation of related national laws and rules and industrial standard, and violation of this instruction manual, etc., we will bear no liability.
- (5) The final right to interpret for this instruction manual belongs to Daitso.

Contents

| | |
|--|-----------|
| 1 Safety Notices (Please be sure to abide them) | 1 |
| 2 Operation Notices | 1 |
| 3 Functions Overview | 3 |
| 4 Detail Introduction | 5 |
| 4.1 Interface Function Instruction | 5 |
| 4.2 Button Instruction | 7 |
| 4.3 Display Instruction | 7 |
| 4.4 Function Instruction | 8 |
| 5 Product Installation | 19 |
| 5.1 Product Dimension | 19 |
| 5.2 Installation Procedure | 20 |
| 5.3 Communication Connection | 22 |
| 6 Error Display | 31 |
| 6.1 Table of Error Codes for Outdoor Unit | 31 |
| 6.2 Table of Error Codes for Indoor Unit | 34 |
| 6.3 Table of Debugging Codes | 37 |
| 6.4 Table of Status Codes | 39 |

1 Safety Notices (Please be sure to abide them)



WARNING: If not abide them strictly, it may cause severe damage to the unit or the people.



NOTE: If not abide them strictly, it may cause slight or medium damage to the unit or the people.



This sign indicates that the items operation must be prohibited. Improper operation may cause severe damage or death to people.



This sign indicates that the items must be observed. Improper operation may cause damage to people or property.



WARNING!

This product can't be installed at corrosive, inflammable or explosive environment or the place with special requirements, such as kitchen. Otherwise, it will affect the normal operation or shorten the service life of the unit, or even cause fire hazard or serious injury. As for the above special places, please adopt special air conditioner with anti-corrosive or anti-explosion function

2 Operation Notices



NOTE!

- (1) This device use 24VAC for power supply. Do not connect other power to this device. Otherwise, it may cause fire hazard or damage to the unit.

 **NOTE!**

- | |
|--|
| (2) Before touching the electric components, please be sure the appliance is disconnected to power. |
| (3) Never install the appliance in a damp place or allow it to be exposed to direct sunlight. |
| (4) Never install the appliance near heat source or a place that may easily get splashes of water. |
| (5) Please install the appliance in a place without electromagnetic interference or dusty particles. |
| (6) Make sure that the communication wires are connected to the correct ports, otherwise communication failure will occur and may damage the appliance. |
| (7) Once wires are connected, use insulative tape to protect the wires from oxidation and short circuit. |
| (8) Working conditions for the appliance: ① Temperature: -20~+60°C; ② Relative humidity: ≤85%; ③ Install it indoors and avoid direct sunlight, rain and snow. |
| (9) Thermostat should be configured for use with a conventional system (not heat pump). |
| (10) Functions with "*" are optional for indoor units. If a function is not included in an indoor unit, the adaptor can't set the function, or setting of this function is invalid to the indoor unit. |

3 Functions Overview

Dry contact & 24 volt adaptor is applicable for Daitsu VRF unit. It can realize two functions:

- (1) Transfer the control signal of 24VAC HVAC Thermostat (such as nest) into the control signal of Daitsu VRF unit to make the third party 24VAC HVAC Thermostat can control VRF unit. The device type should be set as “24 Volt Adaptor”. Refer to 4.4.4 parameter setting P01 for details.
- (2) The detection function of fire alarm signal and other dry contact's signal is used for detecting the signals, such as fire alarm and overflow protection of external water tray, for control the shutdown of air conditioner. The device type can be set as “24 Volt Adaptor” or “Dry Contact Adaptor”. Refer to 4.4.4 parameter setting P01 for details.

NOTE: In a heat recovery system, if several indoor units are connected to one branch of the mode exchanger, then these indoor units cannot use 24V adaptor. (It can be used only when one indoor unit is connected to each branch.)

Dry Contact & 24 Volt Adaptor

Appearance of dry contact & 24 volt adaptor as shown in fig.3.1:



Fig.3.1 Appearance of dry contact & 24 volt adaptor

4 Detail Introduction

4.1 Interface Function Instruction

Schematic diagram of interface of main board and interface function instruction are shown in fig.4.1 and table 4.1 as below:

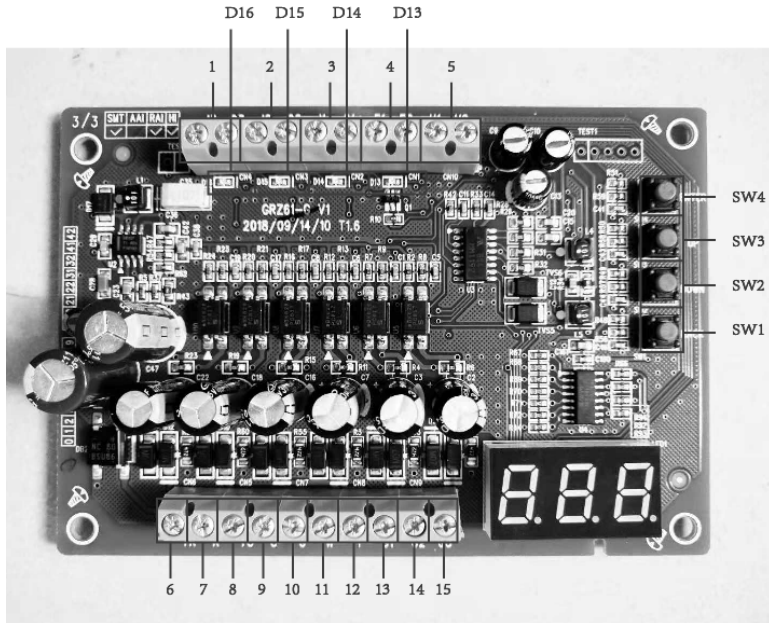


Fig.4.1 Schematic diagram of interface's function

Table 4.1 Function instruction of interface of main board

| No. | Interface | Instruction |
|-----|-----------|--|
| 1 | I3, O3 | Dry contact 3 |
| 2 | I2, O2 | Dry contact 2 |
| 3 | I1, O1 | Dry contact 1 |
| 4 | F1, F2 | Fire alarm detection |
| 5 | H1, H2 | HBS communication interface, connecting the indoor unit |
| 6 | TR | Supply power for adaptor (24VAC) |
| 7 | R | Supply power for thermostat (24VAC) |
| 8 | TC | Supply power for adaptor (Common) |
| 9 | C | Supply power for thermostat (Common) |
| 10 | G | Fan |
| 11 | W | Heating |
| 12 | Y | Cooling |
| 13 | G1 | Low fan speed |
| 14 | G2 | Medium fan speed |
| 15 | G3 | High fan speed |

4.2 Button Instruction

Function instruction for buttons in fig.4.1 is as below:

Table 4.2 Function instruction for buttons

| No. | Buttons name | Button function |
|-----|--------------|--|
| SW1 | BACK | Return after parameter setting |
| SW2 | DOWN | Decrease parameter setting |
| SW3 | UP | Increase parameter setting |
| SW4 | ENTER | Enter into project parameter setting and confirm parameter setting value |

4.3 Display Instruction

(1) Status instruction of LED indicator in fig.4.1 is as below:

Table 4.3 Status instruction of LED indicator on main board

| | |
|-----|---|
| D13 | When there's signal for the detection interface of fire alarm, it's on; when the signal of fire alarm disappears, it's off. |
| D14 | When there's signal for dry contact 1, it's on; when the signal of dry contact disappears, it's off. |
| D15 | When there's signal for dry contact 2, it's on; when the signal of dry contact 2 disappears, it's off. |
| D16 | When there's signal for dry contact 3, it's on; when the signal of dry contact 3 disappears, it's off. |

- (2) 3-bit nixie tube displays on/off status, error code and engineering parameter setting. When turning on the unit, the 3-bit nixie tube displays “on”; when turning off the unit, the 3-bit nixie tube displays “OFF”.

4.4 Function Instruction

4.4.1 Operation Mode

Corresponding operation modes for the input signals of different interfaces on the main board is as below:

Table 4.4 Corresponding operation mode for each input signal

| Y | W | G | G1 | G2 | G3 | Mode |
|---|---|---|----|----|----|---------|
| √ | x | * | * | * | * | Cooling |
| x | √ | * | * | * | * | Heating |
| x | x | √ | * | * | * | Fan |
| x | x | * | √ | * | * | Fan |
| x | x | * | * | √ | * | Fan |
| x | x | * | * | * | √ | Fan |
| √ | √ | * | * | * | * | OFF |
| x | x | x | x | x | x | OFF |

NOTE:

- ① “√” indicates ON; “x” indicates OFF; “*” indicates ON or OFF.

- ② The system operation mode is subject to the operation mode of master indoor unit. When the operation mode of slave indoor unit is conflicting with the system operation mode, the operation mode of slave indoor unit will automatically change to the system operation mode. (If the thermostat connects with the slave indoor unit, the mode displayed on the thermostat and the actual operation mode of the indoor unit is inconsistent when there's mode conflict. The actual operation mode of indoor unit is kept the same with the system mode).
- ③ When G1, G2 and G3 are all OFF, the defaulted fan speed is auto fan speed (change the fan speed by referring to the parameter setting P02. Refer to 4.4.4 parameter setting for details); When any one interface of G1, G2 and G3 is ON, the fan speed is decided by the signal of G1, G2 and G3. See the table as below:

| G | G1 | G2 | G3 | Mode |
|---|----|----|----|------------------|
| * | * | * | √ | High fan speed |
| * | * | √ | × | Medium fan speed |
| * | √ | × | × | Low fan speed |

- ④ When long-distance monitor or centralized controller has sent the shielding command, indoor unit's status can't be changed by the thermostat, and the nixie tube displays "Ay". If it's the locking status, press the button and "Ay" will flash to display, which indicates the invalid operation.

4.4.2 Temperature Setting

- (1) When the unit is operating under cooling mode, the adaptor is fixed to send the set temperature of 16°C to the indoor unit;
- (2) When the unit is operating under heating mode, the adaptor is fixed to send the set temperature of 30°C to the indoor unit;
- (3) When the unit is operating under fan mode, the adaptor is fixed to send the set temperature of 26°C to the indoor unit.

4.4.3 Fire Alarm and Dry Contact Signal Detection

- (1) Fire alarm signal detection: When the fire alarm signal is detected, the fire alarm signal LED will be on and dry contact & 24 volt adaptor will turn off the unit; when the fire alarm signal disappears, the fire alarm signal LED will be off and it will resume the original operation status (set it to keep the off status after the fire alarm signal is disappeared through the parameter setting P04).
- (2) Dry contact signal detection: When the signal is detected by the dry contact interface, the corresponding dry contact LED will be on and dry contact & 24 volt adaptor will turn off the unit. The unit can't be turned on; when all dry contact signals are disappeared, the corresponding dry contact signal LED will be off and keep the off status. The unit can be turned on.

NOTE: If the adaptor is completely shielded (locked), dry contact and fire signal will be invalid.

4.4.4 Parameter Setting

Unit parameters can be set under on or off status.

- (1) Press “ENTER” button to enter into parameter setting page. The nixie tube displays “P00”.
- (2) Press “UP” or “DOWN” button can select parameter code. Press “ENTER” button to switch to parameter value setting and the nixie tube flashes to display the parameter value. Press “UP” or “DOWN” button can adjust the parameter value and then press “ENTER” to complete the setting.
- (3) Press “BACK” button to return to previous level.

NOTE: after entering the parameter setting state, there will be no operation in 20 seconds, and the parameter setting state will be exited.

Unit parameters setting list is shown as below:

Table 4.5 Unit parameters setting list

| Parameter code | Parameter name | Parameter range | Default value | Remark |
|----------------|---------------------|--|---------------|--|
| P01 | Device type setting | 00: 24 Volt Adaptor 01: Dry Contact Adaptor | 00 | When set to “00”, as an adapter for the 24V thermostat, it needs to be connected to a third-party thermostat. It also has the function of fire alarm and dry contact signal detection, while it can not be matched with the wired controller for operation. When set to “01”, this device is only used as a dry contact detection board. It is only used to detect fire alarm and dry contact signals, while it can not be connected to a third-party thermostat. In this case, the device can be matched with the wired controller, while this device should be set as slave device. Refer to the setting on P13. |

| Parameter code | Parameter name | Parameter range | Default value | Remark |
|----------------|------------------------|---|---------------|--|
| P02 | Fan speed setting | 00: auto 01: low speed 02: medium speed 03: high speed | 00 | When there's no G1, G2 or G3 signal, the defaulted fan speed for the indoor unit is auto fan speed. It can also be set as low speed, medium speed or high speed. |
| P03 | Delay OFF time setting | 00: 5min 01: 10 min 02: 30 min 03: 0 min | 00 | When the third party thermostat has reached to the temperature point (Y and W signal are all OFF), the adaptor will continue to operate for a period of time for ensuring the operation effect. The delay OFF time can be set through P03 setting. |

Dry Contact & 24 Volt Adaptor

| Parameter code | Parameter name | Parameter range | Default value | Remark |
|----------------|--|--|---------------|--|
| P04 | Indoor unit's operation status when the fire alarm signal is disappeared | 00: resume to the previous status 01: keep OFF status | 00 | When set to "00", resume to status before the fire alarm signal (when the previous signal is ON, resume ON status when the fire alarm is disappeared); When set to "01", keep OFF status when the fire alarm signal is disappeared. |
| P10 | Master indoor unit setting | 00: no change setting 01: startup | 00 | When set to "00", don't change current master-slave status; When set to "01", set current indoor unit as the master indoor unit. |

| Parameter code | Parameter name | Parameter range | Default value | Remark |
|----------------|------------------------|---------------------------------------|---------------|---|
| P13 | Device address setting | 01: master device 02: slave device | 01 | <p>When this device matched with the wired controller for operation (one adaptor and one wired controller are connected to the same indoor unit), it needs to set the address of this device to "02" (it also needs to make sure the address of wired controller is "01");</p> <p>When this device hasn't matched with the wired controller for operation, it needs to set the address of this device to "01".</p> <p>Note: This item can be set only when P01 is set to "01" (that's, the device type is "Dry Contact Adaptor"); when P01 is set to "00", this device is fixed as the master device.</p> |

Dry Contact & 24 Volt Adaptor

| Parameter code | Parameter name | Parameter range | Default value | Remark |
|----------------|--|--|---------------|--|
| P14 | Indoor unit's quantity setting for one-to-more | 00: this function is prohibited 01: Quantity of indoor unit | 01 | Set corresponding value according to quantity of indoor unit. |
| P16 | Temperature unit switchover | 00: °C 01: °F | 00 | — |
| P30 | Static pressure setting for indoor fan | 01, 02, 03, 04, 05, 06, 07, 08, 09 | 05 | There are two kinds of static pressure level: 5 levels: 03, 04, 05, 06, 07 9 levels: 01, 02, 03, 04, 05, 06, 07, 08, 09 Adaptor can be adapted to the different types of indoor units that it possesses 1-9 level selection for setting static pressure. When the indoor unit with 5 static pressure levels received the level setting sent by Adaptor is less than 3, it will be settled as the 3rd level; if it is over 7, it will be settled as the 7th level. |

| Parameter code | Parameter name | Parameter range | Default value | Remark |
|----------------|--|--|----------------|--|
| P43 | Priority operation setting | 00: non-priority operation 01: priority operation | 00 | When the power supply is insufficient, allow the priority indoor unit to turn on or turn off the unit. Other indoor units will be turned off compulsively. |
| P50 | Set the target outlet air temperature of fresh air indoor unit under cooling mode* | Range: 16~30°C (61~86°F) | 18°C (64°F) | Only for fresh air processing indoor unit. |
| P51 | Set the target outlet air temperature of fresh air indoor unit under heating mode* | Range: 16~30°C (61~86°F) | 22°C (72°F) | Only for fresh air processing indoor unit. |

Dry Contact & 24 Volt Adaptor

| Parameter code | Parameter name | Parameter range | Default value | Remark |
|----------------|--|--|---------------|--|
| P54 | Linkage setting for fresh air indoor unit* | 00: Non-linkage control 01: Linkage control | 00 | When the linkage function has been set, the fresh air indoor unit will be turned on or turned off automatically according to the on/off of the common indoor unit. It can also be turned on or turned off independently by hand. Note: Only for fresh air processing indoor unit. |
| P76 | PM2.5 Filter function* | 00: invalid 01: valid | 00 | — |

5 Product Installation

5.1 Product Dimension

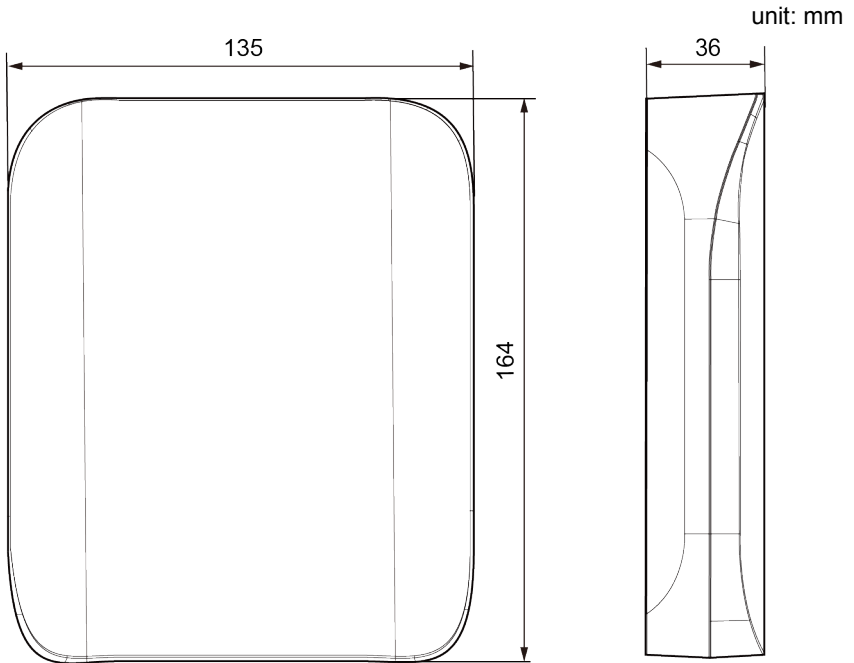


Fig.5.1 Product dimension

5.2 Installation Procedure

- (1) Twist off the screws used for fixing the cover, and then open the cover of dry contact & 24 volt adaptor.
- (2) Check whether the screws used for fixing the screws of main board is loose. If yes, please tighten the screws until the main board is fixed.
- (3) Attach the bottom case of dry contact & 24 volt adaptor at the installation position (such as wall), and then use the screw to fix the bottom case and the installation hole on the wall together.

Connect the wires to the corresponding wiring terminal by passing through the rubber ring, and then tighten the screws on the contact to fix the connection wire.

- (4) Press the wires with wire-fixing clamp and then tighten the screws used for fixing the wire-fixing clamp.
- (5) Close the gateway cover of dry contact and then tighten the screws used for fixing the cover.

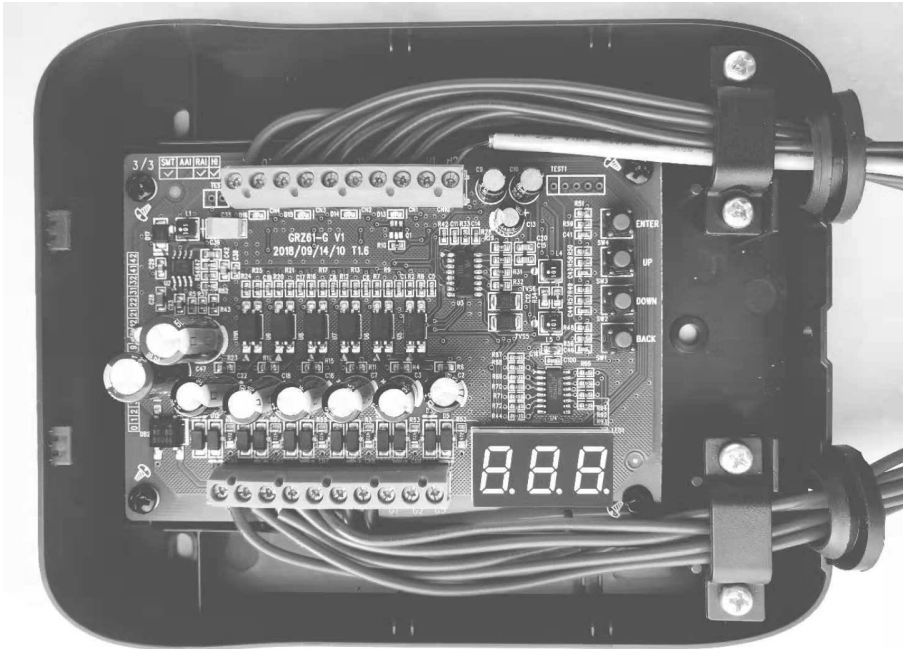


Fig.5.2 Wiring diagram

5.3 Communication Connection

5.3.1 Connection Between Adapter and Indoor Unit

H1 and H2 of HBS communication interface of adapter shall be connected to H1 and H2 of indoor unit for realize the communication between the adapter and the indoor unit.

(1) Communication wire selection

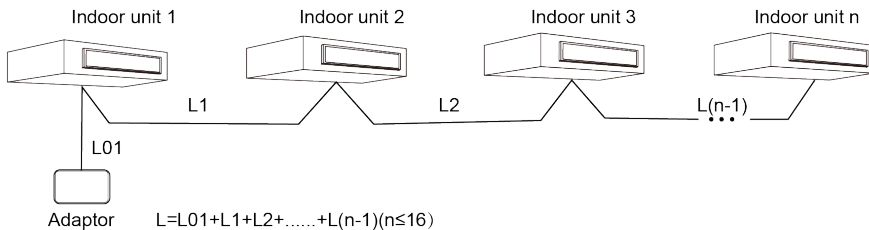


Fig.5.3 Length of communication wire

| Wire material type | Total length of communication line between indoor unit and wired controller L (m/feet) | Wire size (mm ² /AWG) | Material standard | Remarks |
|---|---|---|-------------------|---|
| Light/ Ordinary Polyvinyl chloride sheathed cord. (60227 IEC 52 /60227 IEC 53) | L≤250m (L≤820-1/5feet) | 2×0.75mm ² ~2×1.25mm ² (2×AWG18 ~2×AWG16) | IEC 60227-5: 2007 | (1) Total length of communication line can't exceed 250m (820-1/5feet). (2) The cord shall be Circular cord (the cores shall be twisted together). (3) If unit is installed in places with intense magnetic field or strong interference, it is necessary to use shielded wire. |

(2) Communication connection method

When the device type for dry contact & 24 volt adaptor is the dry contact adaptor, the adapter can be matched with the wired controller for operation. There are four

wiring methods with the indoor unit's network which are shown in fig.5.4 to fig.5.7; when the device type is 24 volt adaptor, the adaptor can't be matched with the wired controller for operation. There are only two wiring methods with the indoor unit's network, which are shown in fig.5.8 and fig.5.9.

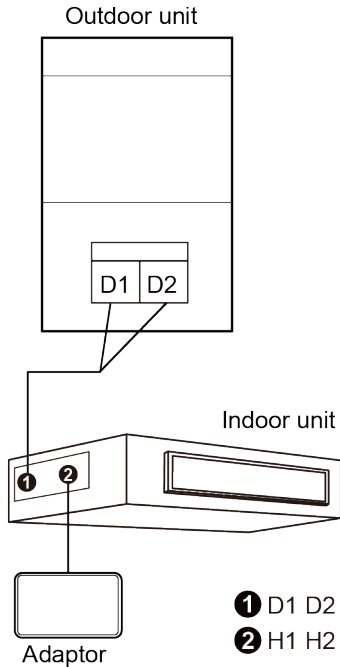


Fig.5.4 One adaptor controls one indoor unit

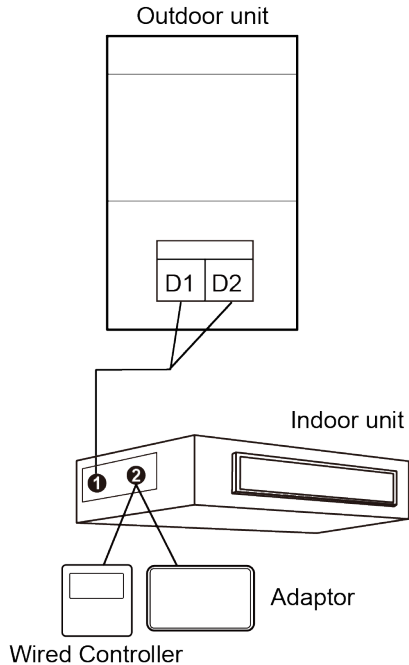


Fig.5.5 One adaptor and one wired controller control one indoor unit

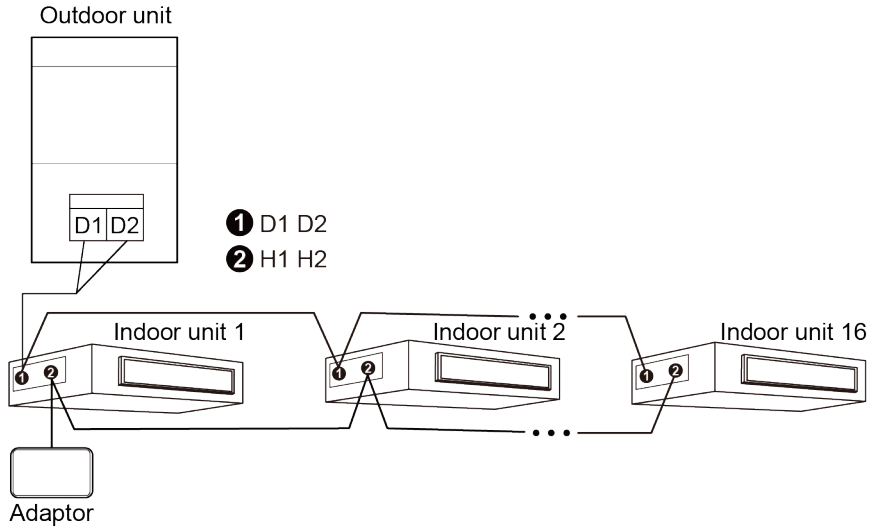


Fig.5.6 One adaptor controls multiple indoor units at the same time

Dry Contact & 24 Volt Adaptor

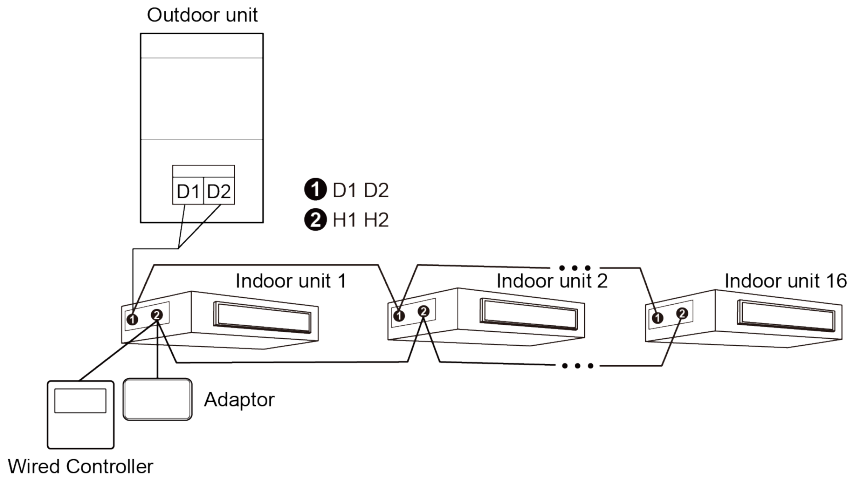


Fig. 5.7 One adaptor and one wired controller controls multiple indoor units

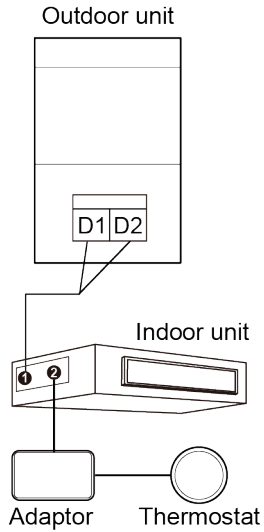


Fig. 5.8 One adaptor controls one indoor unit

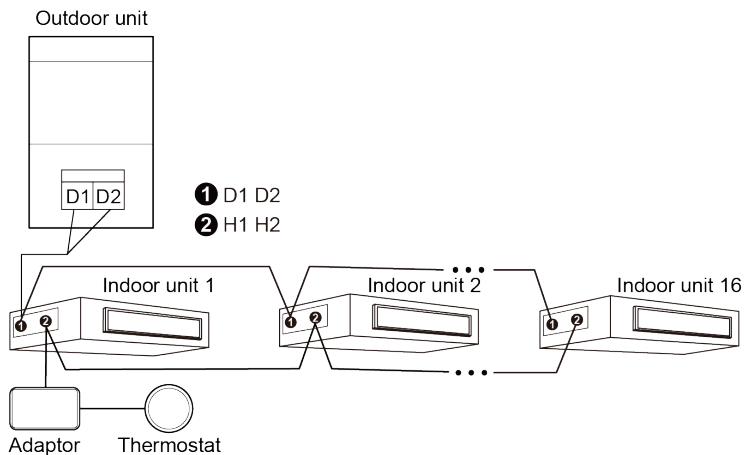


Fig. 5.9 One adaptor controls multiple indoor units at the same time

Wiring instruction:

- ① When dry contact & 24 volt adaptor control multiple indoor units at the same time, dry contact & 24 volt adaptor can connect the HBS interface (H1, H2) of any one indoor unit. The indoor units which are connected to the dry contact & 24 volt adaptor should belong to the same series. The gateway (or wired controller) can control 16 sets of indoor units at the most and these indoor units should be in the same HBS network.
- ② When dry contact & 24 volt adaptor and wired controller control one (or multiple) indoor units, dry contact & 24 volt adaptor must be the slave device,

while the wired controller should be master device. Please refer to the 4.4.4 parameter setting on P13 for the setting method of master or slave device.

- ③ When dry contact & 24 volt adaptor control multiple indoor units at the same time, all indoor units' status shall be the same.

NOTE: HBS communication interface of dry contact & 24 volt adaptor is the non-polar interface. It's no need to consider the polar of HBS interface for wiring.

5.3.2 Connection of Adaptor and Thermostat

The connection between dry contact & 24 volt adaptor and the third party 24VAC HVAC thermostat is shown as below:

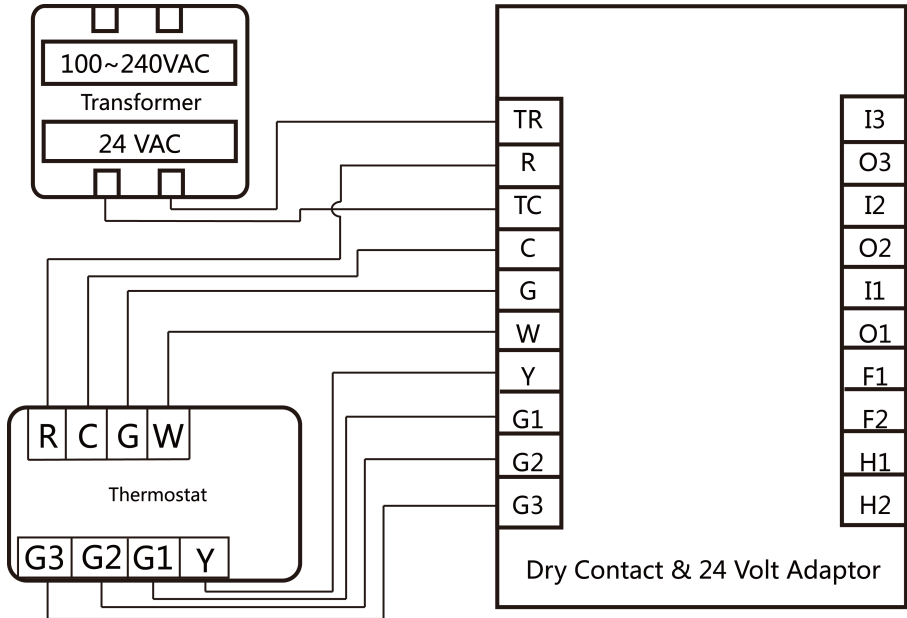


Fig.5.10 Schematic diagram of wiring between adaptor and thermostat

NOTE: If the thermostat hasn't G1, G2 and G3 (low, medium and high fan speeds) interfaces, it's no need to connect wires for these three interfaces of adaptor.

6 Error Display

When there's malfunction during operation, the nixie tube of dry contact & 24 volt adaptor will display the error code. If multiple malfunctions occur at the same time, error codes will be displayed circularly.

NOTE:

When there's malfunction, please turn off the unit and ask for professional person to maintain it.

6.1 Table of Error Codes for Outdoor Unit

| Error Code | Content | Error Code | Content |
|------------|---|------------|--|
| E0 | Outdoor Unit Error | J9 | System Pressure Under-Ratio Protection |
| E1 | High Pressure Protection | JA | Protection of Abnormal Pressure |
| E2 | Discharge Low Temperature Protection | JC | Protection of Water Flow Switch |
| E3 | Low Pressure Protection | JL | Protection of Low High-pressure |
| E4 | Excess Discharge Temperature Protection of Compressor | JE | Oil Return Pipe is Blocked |
| Ed | Low Temperature Protection of Driver Module | JF | Oil Return Pipe is Leaking |

Dry Contact & 24 Volt Adaptor

| Error Code | Content | Error Code | Content |
|------------|---|------------|--|
| F0 | Bad Performance of the Outdoor Mainboard | JJ | Low Water-in Temperature Protection |
| F1 | High Pressure Sensor Error | b1 | Outdoor Ambient Temperature Sensor Error |
| F2 | Inlet Tube Temperature Sensor Error of Plate Type Heat Exchanger | b2 | Defrosting Temperature Sensor 1 Error |
| F3 | Low Pressure Sensor Error | b3 | Defrosting Temperature Sensor 2 Error |
| F4 | Outlet Tube Temperature Sensor Error of Plate Type Heat Exchanger | b4 | Subcooler Liquid-out Temperature Sensor Error |
| F5 | Compressor 1 Discharge Temperature Sensor Error | b5 | Subcooler Gas-out Temperature Sensor Error |
| F6 | Compressor 2 Discharge Temperature Sensor Error | b6 | Gas-liquid Separator Inlet Temperature Sensor Error |
| F7 | Compressor 3 Discharge Temperature Sensor Error | b7 | Gas-liquid Separator Outlet Temperature Sensor Error |
| F8 | Compressor 4 Discharge Temperature Sensor Error | b8 | Outdoor Humidity Sensor Error |
| F9 | Compressor 5 Discharge Temperature Sensor Error | b9 | Heat Exchanger Gas-out Temperature Sensor Error |
| FA | Compressor 6 Discharge Temperature Sensor Error | bA | Oil-return Temperature Sensor Error |

| Error Code | Content | Error Code | Content |
|------------|---|------------|---|
| FC | Compressor 2 Current Sensor Error | bH | System Clock Malfunction |
| FL | Compressor 3 Current Sensor Error | bE | Malfunction of Entry Tube Temperature Sensor of Condenser |
| FE | Compressor 4 Current Sensor Error | bF | Malfunction of Exit Tube Temperature Sensor of Condenser |
| FF | Compressor 5 Current Sensor Error | bJ | High and Low Pressure Sensors are Connected Inversely |
| FJ | Compressor 6 Current Sensor Error | bP | Oil-return 2 Temperature Sensor Error |
| FP | Malfunction of DC motor | bU | Oil-return 3 Temperature Sensor Error |
| FU | Compressor 1 Top Temperature Sensor Error | bb | Oil-return 4 Temperature Sensor Error |
| Fb | Compressor 2 Top Temperature Sensor Error | bd | Air-in Temperature Sensor Error of Subcooler |
| Fd | Mode Exchanger Outlet Pipe Temperature Sensor Error | bn | Liquid-in Temperature Sensor Error of Subcooler |
| Fn | Mode Exchanger Inlet Pipe Temperature Sensor Error | by | Water-out Temperature Sensor Error |
| Fy | Water-in Temperature Sensor Error | P0 | Compressor Drive Board Error |

Dry Contact & 24 Volt Adaptor

| Error Code | Content | Error Code | Content |
|------------|---------------------------------------|------------|---|
| J1 | Compressor 1 Over-current Protection | P1 | Compressor Drive Board Malfunction |
| J2 | Compressor 2 Over-current Protection | P2 | Protection of Compressor Drive Board Power Supply |
| J3 | Compressor 3 Over-current Protection | P3 | Protection of Compressor Drive Board Module Reset |
| J4 | Compressor 4 Over-current Protection | H0 | Error of Fan Drive Board |
| J5 | Compressor 5 Over-current Protection | H1 | Malfunction of Fan Drive Board |
| J6 | Compressor 6 Over-current Protection | H2 | Protection of Fan Drive Board Power Supply |
| J7 | 4-way Valve Blow-by Protection | GH | PV DC/DC Protection |
| J8 | System Pressure Over-Ratio Protection | — | — |

6.2 Table of Error Codes for Indoor Unit

| Error Code | Content | Error Code | Content |
|------------|-----------------------|------------|-------------------------------------|
| L0 | Indoor Unit Error | dL | Outlet Air Temperature Sensor Error |
| L1 | Indoor Fan Protection | dE | Indoor Unit CO2 Sensor Error |
| L2 | E-heater Protection | db | Special Code: Field Debugging Code |

| Error Code | Content | Error Code | Content |
|------------|--|------------|--|
| L3 | Water Full Protection | dn | Swing Assembly Error |
| L4 | Wired Controller Power Supply Error | dy | Water Temperature Sensor Error |
| L5 | Anti-Frosting Protection | y1 | Inlet Pipe Temperature Sensor 2 Error |
| L6 | Mode Conflict | y2 | Outlet Pipe Temperature Sensor 2 Error |
| L7 | No Master Indoor Unit Error | y3 | Middle Tube Temperature Sensor 2 Error |
| L8 | Power Insufficiency Protection | y7 | Fresh Air Inflow Temperature Sensor Error |
| L9 | Quantity Of Group Control Indoor Units Setting Error | y8 | Indoor Air Box Sensor Error |
| LA | Indoor Units Incompatibility Error | y9 | Outdoor Air Box Sensor Error |
| LH | Low Air Quantity Warning | yA | IFD error |
| LC | Outdoor-Indoor Incompatibility Error | yH | Fresh Air-out Sensor Error |
| LF | Shunt Valve Setting Error | yC | Air-return Inlet Sensor Error |
| LJ | Wrong Setting of Function DIP Switch | yL | Air-return Outlet Temperature Sensor Error |
| LP | Zero-crossing Malfunction of PG Motor | yE | High Liquid Level Switch Error |
| LU | Inconsistent Branch of Group-controlled Indoor Units in Heat Recovery System | yF | Low Liquid Level Switch Error |

Dry Contact & 24 Volt Adaptor

| Error Code | Content | Error Code | Content |
|------------|--|------------|--|
| Lb | Inconsistency of Group-controlled Indoor Units in Reheat Dehumidification System | o0 | Motor Drive Error |
| Ld | Indoor Fan 2 Error | o1 | Low Voltage of IDU Bus Bar |
| Ln | Lift Panel Return Air Frame Reset Exception | o2 | High Voltage of IDU Bus Bar |
| d1 | Indoor Unit PC-Board Error | o3 | IDU IPM Module Protection |
| d3 | Ambient Temperature Sensor Error | o4 | IDU Startup Failure |
| d4 | Inlet Pipe Temperature Sensor Error | o5 | IDU Overcurrent Protection |
| d5 | Malfunction of Middle Tube Temperature Sensor | o6 | IDU Current Detective Electric Circuit Error |
| d6 | Outlet Pipe Temperature Sensor Error | o7 | IDU Losing Step Protection |
| d7 | Humidity Sensor Error | o8 | IDU Driver Communication Error |
| d8 | Water Temperature Abnormality | o9 | Communication Error of IDU Master Controller |
| d9 | Jumper Cap Error | oA | High Temperature of IDU Module |
| dA | Indoor Unit Hardware Address Error | oC | IDU Charging Circuit Error |
| dH | Wired Controller PC-Board Error | ob | Temperature Sensor Error of IDU Module |
| dC | Capacity DIP Switch Setting Error | — | — |

6.3 Table of Debugging Codes

| Error Code | Content | Error Code | Content |
|------------|--|------------|--|
| U2 | Outdoor Unit Capacity Code/Jumper Cap Setting Error | C0 | Communication between indoor unit and outdoor unit and the communication between indoor unit and wired controller have malfunction |
| U3 | Phase Sequence Protection of Power Supply | C1 | Communication error of expansion board |
| U4 | Protection of Lack of Refrigerant | C2 | Communication error between master control and inverter compressor drive |
| U5 | Wrong Address of Compressor Drive Board | C3 | Communication error between master control and inverter fan motor drive |
| U6 | Valve Abnormal Alarm | C4 | Error of Lack of Indoor Unit |
| U7 | Grid DRED0 Response Protection | C5 | Alarm of Indoor Unit Project Number Collision |
| U8 | Indoor Unit Tube Malfunction | C6 | Alarm of Wrong Number of Outdoor Unit |
| U9 | Outdoor Unit Tube Malfunction | C7 | Mode Exchanger Communication Error |
| UA | Overvoltage Protection of DC Bus Bar in Power Grid Side | CH | Rated capacity is too high |
| UH | Undervoltage Protection of DC Bus Bar in Power Grid Side | CC | No master control unit error |

Dry Contact & 24 Volt Adaptor

| Error Code | Content | Error Code | Content |
|------------|--|------------|---|
| UC | Master indoor unit is successfully set | CL | Rated capacity is too low |
| UL | Emergency Operation DIP switch setting of the compressor is wrong | CE | Communication Failure Between Mode Exchanger and Indoor Unit |
| UE | Refrigerant Charging is ineffective | CF | Error of Multiple Master Indoor Unit |
| UF | Indoor Unit Identification Error of Mode Exchanger | CJ | System addresses is incompatible |
| UJ | PV module F0 protection | CP | Error of Multiple Master Wired Controller |
| UP | Protection shutdown error of thermal storage module | CU | Communication Error between Indoor Unit and Remote Receiver |
| UU | Electronic expansion valve leak error of thermal storage module | Cb | Outflow of Units IP Address |
| Ub | Protection without shutdown error of thermal storage module | Cd | Communication Failure Between Mode Exchanger and Outdoor Unit |
| Ud | Grid-connection driver board error | Cn | Indoor and Outdoor Network Error of Mode Exchanger |
| Un | Communication error between grid-connection driver board and master controller | Cy | Communication Error of No Master in Mode Exchanger |
| Uy | PV module overheating protection | — | — |

6.4 Table of Status Codes

| Error Code | Content | Error Code | Content |
|------------|---|------------|--|
| A0 | Unit is waiting for debugging | Ay | Shielding status |
| A1 | Check the compressor operation parameters | n3 | Compulsory defrosting |
| A2 | After-sales Refrigerant Reclaim | q5 | Setting of ordinary units and high sensible heat units |
| A3 | Defrosting | q7 | Select degree Celsius or Fahrenheit |
| A4 | Oil return | q8 | Discharge low temperature protection revision value b |
| A5 | Online Testing | q9 | Setting of defrosting mode |
| A8 | Vacuum-pumping Mode | qL | Setting of static pressure |
| A9 | Operate in Setback Function | qE | EVI Operating Mode |
| AH | Heating | qF | System compulsory cooling mode |
| AC | Cooling | qP | PV GMV Unit export area setting |
| AF | Fan | qU | Grid voltage system configuration |
| AJ | Filter Clean Reminder | qb | Anti-condensation temperature setting |
| AU | Remote Urgent Stop | qd | Setting of target degree of super-cooling of ODU |
| Ab | Emergency Stop | qn | PV grid-connected settings |
| Ad | Operation Restriction | qy | Working mode of compressor heating belt |
| An | Lock status | — | — |

dzitsu

EUROFRED
being efficient

Eurofred S.A.
Marqués de Sentmenat 97
08029 Barcelona
www.eurofred.es